


Bracket Mount

To +VDC (Suggested Fuse Rating @ 1A).....**RED**:

To Chassis -Ground:.....**BLACK**:

To +VDC for Steady-burn.....**WHITE**:

For Synchronization, Flash Pattern and Setting
(see operation).....**YELLOW**:

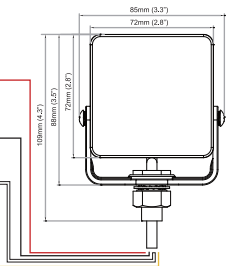

For Warning Synchronization:

Connect **YELLOW** wires of all lighthoods together for synchronization.
(All lighthoods should be set to the same Flash Pattern)

For Simultaneous or Alternating Warning Flash:

- Apply +VDC to **RED** and **YELLOW** wires simultaneously to enter *Grouping Mode*; lighthouse will display short (single or double) flashes:
 - Single flash = Group1
 - Double flash = Group2
- Remove **YELLOW** wire from +VDC then momentarily apply +VDC to **YELLOW** wire again to change Groups:
 - Lighthoods of the same Group will flash together.
 - Group 1 Heads alternate with Group 2 Heads.
- Save and Exit *Grouping Mode* by powering off the lighthouse.

For changing Warning Flash Pattern:

Momentarily apply +VDC to **YELLOW** wire:

- once to next pattern
- quickly three times to reset to FP#1

Note:

- All approvals based on actual model ordered.
- This product may not be factory-set at FP#1.

Flash Patterns

Flash Patterns			
1	Single (2Hz)	4	Quad (2Hz)
2	Double (R65)	5	Steady 4
3	Triple (2Hz)		