


Bracket Mount

To +VDC (Suggested Fuse Rating @ 3A).....**RED**:

To Chassis -Ground:.....**BLACK**:

To +VDC for Steady-burn.....**WHITE**:

For Synchronization, Flash Pattern and Setting
(see operation).....**YELLOW**:

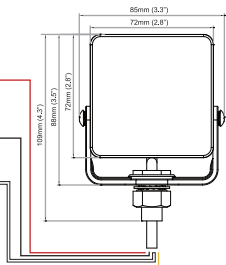

For Warning Synchronization:

Connect **YELLOW** wires of all lighthoods together for synchronization.

(All lighthoods should be set to the same Flash Pattern)

For Simultaneous or Alternating Warning Flash:

- Apply +VDC to **RED** and **YELLOW** wires simultaneously to enter *Grouping Mode*; lighthood will display short (single or double) flashes:
 - Single flash = Group1
 - Double flash = Group2
- Remove **YELLOW** wire from +VDC then momentarily apply +VDC to **YELLOW** wire again to change Groups:
 - Lighthoods of the same Group will flash together.
 - Group 1 Heads alternate with Group 2 Heads.
- Save and Exit *Grouping Mode* by powering off the lighthood.

For changing Warning Flash Pattern:

Momentarily apply +VDC to **YELLOW** wire:

- once to next pattern
- quickly three times to reset to FP#0

Note:

- All approvals based on actual model ordered.
- This product may not be factory-set at FP#1.

Flash Patterns			
0	Random	10	Double (all)
1	Steady (split)	11	Quad (all)
2	Double (split)	12	Quint (all)
3	Quad (split)	13	Mega (all)
4	Quint (split)	14	Ultra (all)
5	Mega (split)	15	Single-Quad (all)
6	Ultra (split)	16	Single H/L (all)
7	Single-Quad (split)	17	Steady 2 (california)
8	Single H/L (split)	18	Steady 4 (all)
9	Single (all)		

*SPLIT = top/down alternating *ALL = all LEDs on